


MOVER FRONT SIGHT

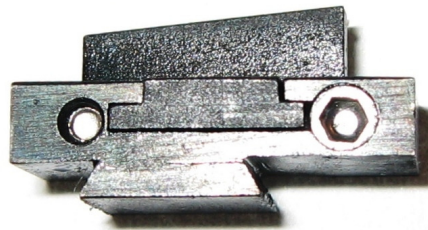

To use the sight, push the sight blade to one side or the other, as shown above, with your fingertips. For a target moving from right to left, the sight blade must be on the right side. For a target moving from left to right, the sight blade must be on the left side. For all stationary targets, the sight blade must be in the center.

The vent hole in the top of the sight blade can be used to lubricate the spring and plunger if needed. Additional lubrication may also be put in the depressions that are visible when the sight blade is on one side or the other.



The amount of lead may be regulated by turning the respective stop screws in the side with the Allen wrench provided. Turn clockwise if you need less lead; turn counter-clockwise if you need more lead. The left screw is for the left-to-right lead, the right screw is for the right-to-left lead. The screws are retained with blue Loctite, so they are adjustable, but will stay where you turn them to.



Protocall Design
8317 Lewis Drive, Rear
(913) 422-8966 (service) (913) 730-0533 (sales)
sales@protocalldesign.com
www.protocalldesign.com