


SEMI-AUTO WINGS MOUNTING INSTRUCTIONS

To mount the 1 ½” and 2” semi-automatic wings, you will need to determine how you want your wings mounted, vertically. You will then need to mark your wings, using the nut plates as templates, then drill and countersink them. You will need to drill them with a 9/64” drill and countersink with an 82-degree countersink. The head of the provided screws should be just below flush when installed.

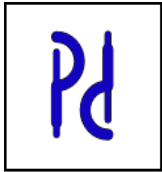

Protocal Design
8317 Lewis Drive, Rear
Lenexa, KS 66227
(913) 422-8966 (service) (913) 730-0533 (sales)
sales@protocaldesign.com
www.protocaldesign.com